Accu-Chek Multiclix:
3 STEPS to faster, easier and safer lancing

1 PRESS
Press priming button down like a ballpoint pen. A
The transparent release button turns yellow. B

2 CLICK
Press lancing device firmly against side of fingertip and press release button.

3 TWIST
To change lancet, turn priming button as far as it will go, and turn back again. C
The white bars on display show how many lancets are left. D

Roche

ACCU-CHEK®

Replacing lancet drum

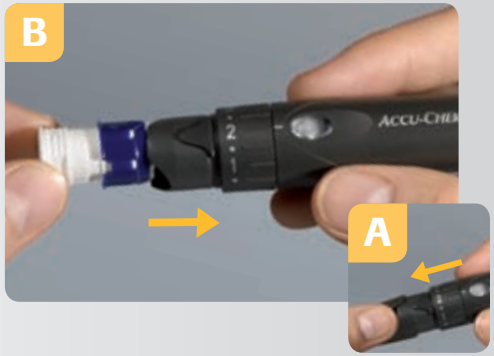

Load drum

- Remove cap. A
- Insert new drum with blue ring end first. B
- Snap drum into place.
- Replace cap.

Exchange drum

When no white bars appear in display, last lancet is in use. C

- Remove cap. A
- Remove used drum. D (It cannot be re-inserted.)
- Dispose of drum with household waste.
- Load new drum. B

Changing depth setting

Set penetration depth

- Turn dial to select depth setting.
- For beginners, select a lower setting (start with level 1).

You're ready to test – **PRESS, CLICK** and **TWIST.**

ACCU-CHEK and ACCU-CHEK MULTICLIX are trademarks of Roche.
© 2009 Roche

www.accu-chek.com
Roche Diagnostics GmbH
Sandhofer Strasse 116
D-68305 Mannheim

Roche

ACCU-CHEK®